TRIM-TEX DRYWALL PRODUCTS

SUPER, GIANT AND OVERSIZED L BEADS FROM TRIM-TEX

Trim-Tex Oversized L Beads are designed as labour saving solutions for finishing window returns and door jams. Create eye-catching plaster art by using Super and Giant L Beads in the detail and feature work.

Installation Guidelines:

- Pre cut all parts to fit the return. Leave 1.5mm clearance on ends. To use pre-scored marks, bend back and repeat several times at the desired score several times, then tear off the strip
 - The strips are sometimes hard to tear because the pre-scored marks must be invisible from the top of the piece
- Slip on the finish trim (if used). Use Mitre Marker (72-0932) for mitering 90° and 135° corners on Bullnose Super & Giant "L" Beads
- Apply 2 or 3 continuous beads of Bostik Extreme Flex Siliconized Acrylic Caulk onto return for full coverage
 - Correct Caulk Coverage: apply one continuous thick bead of caulk for every 50mm of return ensure the caulk also covers the Finish Trim if used
- Align "L" Bead onto return then apply firm, even pressure to entire trim
- Staple mud leg to wall
- Adjust Finish Trim to fit tight against window frame
- Always extend Archway "L"s beyond the arch approximately 400mm onto the straight area where there is sufficient backing material to allow for the butt joint to be properly adhered and to provide a flat surface for floating the butt joint
- Before paint, float and tape all straight butt joints, caulk corner joints and caulk along the window frame


Oversized L Bead

72-3610 Oversized L Bead 25mm 72-3610 Oversized L Bead 32mm 72-3611 Oversized L Bead 68mm (pre-scored at 53mm)

Super & Giant L Bead

72-3710 Super L Bead 80mm (pre-scored at 66, 53 & 41mm) 72-3850 Giant L Bead 145mm (pre-scored at 122, 109 & 95mm)



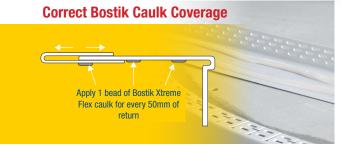





72-3010 Super L Bead Archway 80mm (pre-scored at 65, 53 & 41mm) 79-3000 Giant L Bead Archway 140mm (pre-scored at 122, 109 & 95mm)

For more information contact Wallboard Tools: P: 1300 653 177 | F: 1300 657 442 | E: sales@wallboardtools.com.au | W: www.wallboardtools.com.au

Australia's favourite plastering tools and accessories supplier since 1976 The incorrect installation of Trim-Tex Beads will void any Warranty (see Trim-Tex Product Warranty at www.wallboardtools.com.au) On vertical installation of Trim-Tex beads allow 6mm minimum clearance above floor for structural movement